replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028 E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

TUH043 & TUH044 WIRING HARNESS WIRING DIAGRAM INSTRUCTIONS

- 1. Before installing the wire harness make sure plug is disconnected from the power source and that there is no pressure in the chamber.
- If applicable, disconnect existing wire harness and connect new wire harness per diagram below. (Note: Connector modification may be necessary on some units.)
- 3. Check that all connections are correct and secure.
- 4. Apply power to the sterilizer.
- 5. Run a cycle to verify proper operation.



