

## ADK258 PIVOT TENSION KIT INSTALLATION INSTRUCTIONS

The assembly order of the parts included in our Pivot Tension Kit vary dramatically depending upon the Light Head. The Light Heads will use all or some of the parts included in our Pivot Tension Kit.

Use this exploded view as a guide, but take note of the parts and the order of assembly for the Light Head you are disassembling.

ADK258INS REV- (09/12)





