



replacement parts industries, inc.

"The Alternate Source"<sup>SM</sup>

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028


E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

## AMH189 & AMH192 HEATING ELEMENT CONFIGURATION INSTRUCTIONS

This heater can be configured in one of four ways, depending on your needs. To configure the heater, orient it so as to view it from the jumper end and adjust per the applicable illustration below.


**Note: The heater is shipped in a SINGLE PHASE 9750 WATT configuration.**

### SINGLE PHASE 9750 WATT

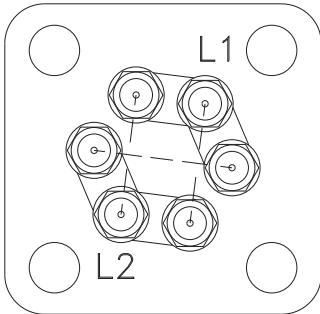


**NOTE:** The heater is shipped in a SINGLE PHASE, 9750 WATT configuration with 4 jumpers used.

### THREE PHASE 9750 WATT

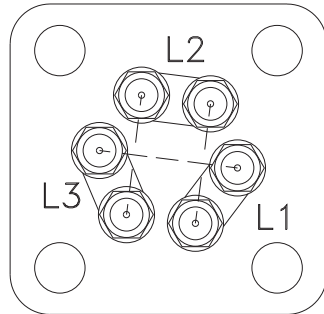


**NOTE:** For Three Phase, 9750 WATT operation, only 3 jumpers are used. Note the location of the L1, L2 and L3 connection points

### SINGLE PHASE 6500 WATT

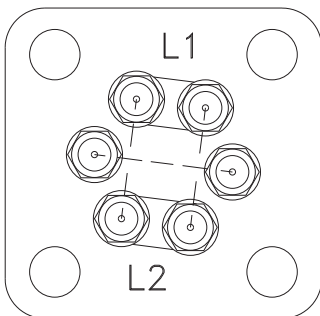

**NOTE:** For 6500 WATT operation, only 2 jumpers are used. Note the location of the L1 and L2 connection points.

### SINGLE PHASE 3250 WATT

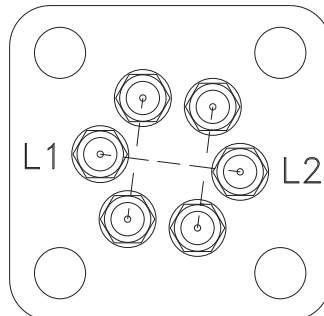

**NOTE:** For 3250 WATT operation, no jumpers are used. Note the location of the L1 and L2 connection points.