




replacement parts industries, inc.


CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

AMK118 PRESSURE TRANSDUCER KIT ASSEMBLY INSTRUCTIONS

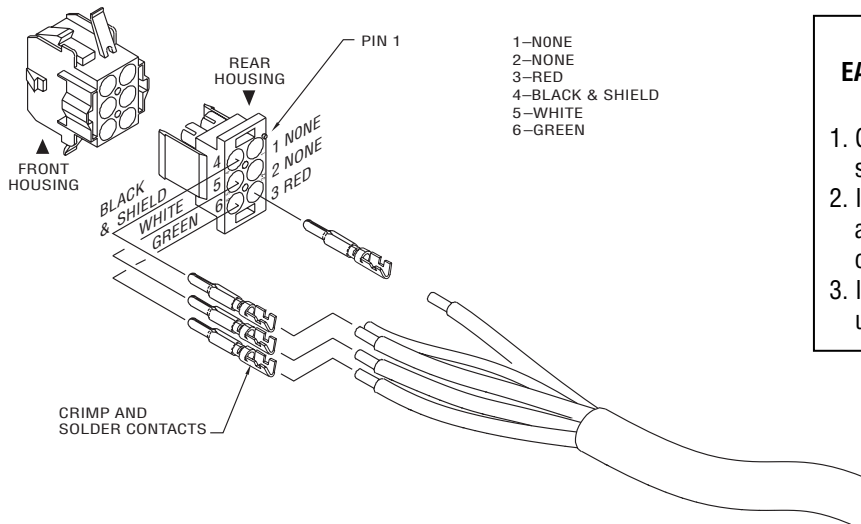


ASSEMBLY INSTRUCTIONS TO FIT EAGLE 3000 SERIES STAGE II VACUMATIC (OEM PART #093908-907)

1. Crimp and solder contacts to wires as shown in illustration to the left.
2. Insert contact with specified wire color into appropriate Rear Housing pin position until contact snaps into hole.
3. Install Front Housing onto Rear Housing until housings snap together.

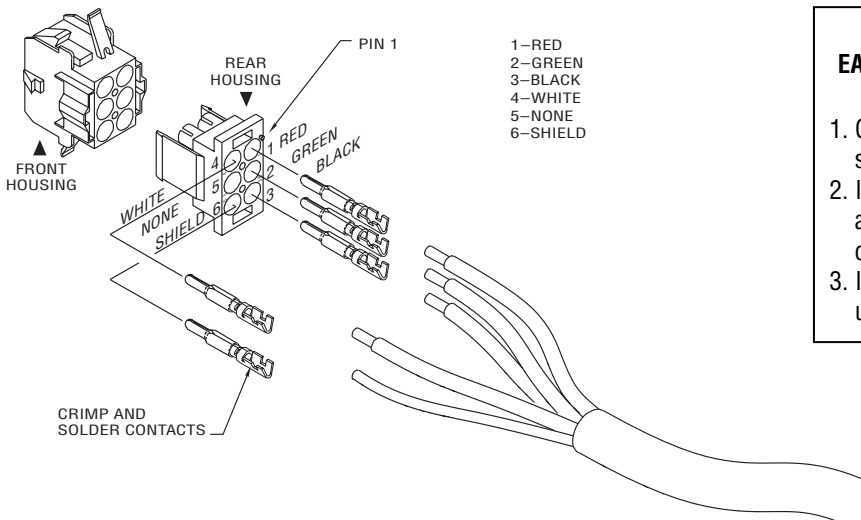

ASSEMBLY INSTRUCTIONS TO FIT EAGLE 3000 SERIES STAGE III VACUMATIC (OEM PART #093910-580)

1. Crimp and solder contacts to wires as shown in illustration to the left.
2. Insert contact with specified wire color into appropriate Rear Housing pin position until contact snaps into hole.
3. Install Front Housing onto Rear Housing until housings snap together.

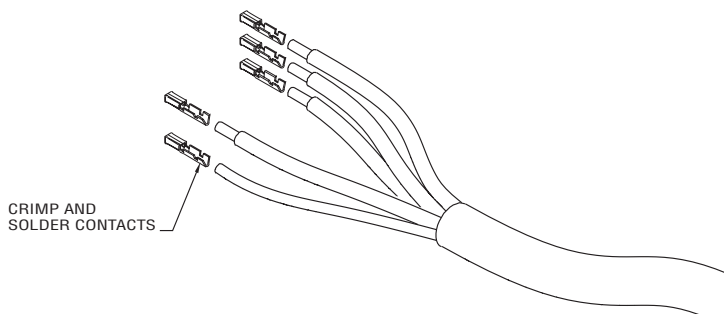

ASSEMBLY INSTRUCTIONS TO FIT EAGLE 2000 SERIES VACUMATIC (OEM PART #056396-215)

1. Crimp and solder contacts to wires as shown in illustration to the left.