



replacement parts industries, inc.

"The Alternate Source"[™]


CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028

E-MAIL: techsupport@rplparts.com • WEBSITE: www.rplparts.com

BK0037

O-RING (ROTOR HOLDER) INSTALLATION INSTRUCTIONS

This O-ring is the only part on the centrifuge which is user-serviceable. The O-ring should be regularly inspected and replaced if it shows signs of wear or flattening. The O-ring should be replaced at least once per year.

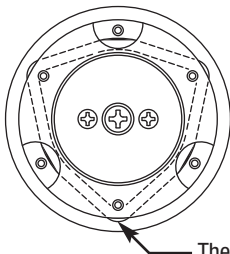

When replacing the O-ring ensure that it is routed in and out of the pins as shown.

These 3 points are where the O-ring touches the rotor.