



replacement parts industries, inc.

"The Alternate Source"™

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

CAT062 TIMER (30 MINUTE) WIRING INSTRUCTIONS

**RPI PART
#CAT062
TIMER**

DYNAC II

| | | |
|-------------------------------|---------------------|--|
| TERMINAL #1 | <i>attaches to</i> | J3-7 PIN ON BOARD |
| TERMINAL #2 | <i>attaches to</i> | "B" POSITION ON RELAY |
| TERMINAL #3 | <i>attaches to</i> | BLACK WIRE WITH PUSH-ON TERMINAL FROM TIMER MOTOR |
| TERMINAL #4 | <i>is left open</i> | |
| REMAINING TIMER MOTOR WIRE | <i>attaches to</i> | J3-5 POSITION ON BOARD |