



"The Alternate Source™"

replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028

E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

## **CMV135 & CMV137 SOLENOID VALVE (PURGE) INSTALLATION INSTRUCTIONS**

Earlier compressors were manufactured using a two wire solenoid valve (no ground wire). Now, replacement valves include a green ground wire that should be connected to a ground point inside the electrical box. *(See Note below regarding Apollo compressors and the ground wire.)*

**NOTE:** Apollo compressors do not require a ground wire. The ground wire from the new solenoid valve may be left unused and capped off.