



replacement parts industries, inc.

"The Alternate Source"®

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

MTA001 AIR FILTER ASSEMBLY INSTALLATION INSTRUCTIONS

IMPORTANT

It is recommended that the Air Filter Assembly be changed every 90 days.

1. The DSD system has two (2) air filter assemblies (A side and B side). Remove and replace one filter at a time.
2. Inspect the female quick-connect fittings for dirt and debris and clean as necessary.
3. Note that the male quick-connect ends on the air filter assembly are color coded to ensure proper direction of air flow when installing the new assembly.
 - Match the blue male quick-connect (inlet side) to the blue female quick-connect fitting (from the air compressor). Install the new assembly.
 - Now do the same for the white quick-connect set (to the manifold assembly). Flow is from the air compressor to the manifold assembly.
4. Record the date of the filter replacement in the appropriate log.
5. Replace the second air filter assembly in the same manner beginning with Step #2 above.