


replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028 E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

OMSO38 HUMIDITY SENSOR INSTALLATION INSTRUCTIONS

Installation of the Humidity Sensor


Remove existing Retainer, Cap, and O-Ring from inside of Compartment Air Probe. Replace with Humidity Sensor, Retainer and O-Ring (RPI Part #RP0304) included in this kit as shown below. (NOTE: This Sensor also fits the Ohmeda Care Plus® Servo Humidifier - not shown below.)

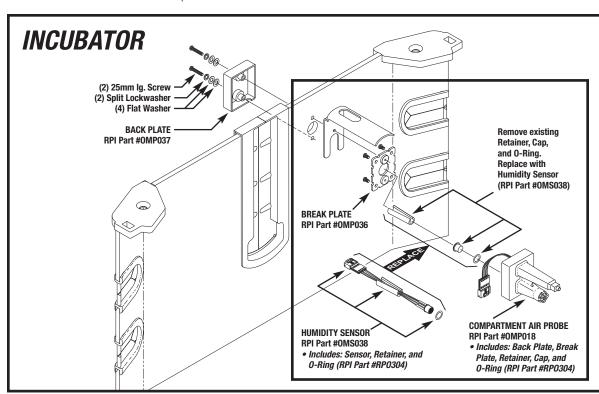

IMPORTANT NOTE:

The Humidity Sensor must be calibrated after installation and prior to use. RPI offers a Calibration Kit that can be used to calibrate the Humidity Sensor.

Calibration Kit RPI Part #0MK040 OEM Part #6600-0048-850

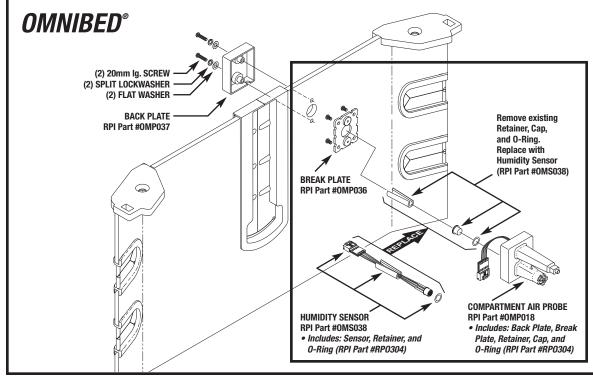

IMPORTANT NOTE:

The Humidity Sensor must be calibrated after installation and prior to use. RPI offers a Calibration Kit that can be used to calibrate the Humidity Sensor.

Calibration Kit RPI Part #0MK040 0EM Part #6600-0048-850

OMS038INS Rev - (01/14)