replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028 E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

PCK205 & PCK206 EINFORCING BLOCK KIT INSTALLATION INSTRUCTIONS

OUTER CASING

- 1. Unplug autoclave and ensure no pressure in chamber.
- 2. Remove outer casing of autoclave. Do not remove front panel.
- 3. Remove the two (2) bolts connecting the mounting flange to the catch assembly and front panel.
- 4. Place one (1) of the reinforcing blocks flat against the forcing block is mounted toward the chamber.
- 5. Using two (2) of the bolts provided in the kit, secure the and front panel.
- 6. Remove the two (2) bolts connecting the mounting flange the door assembly as you remove bolts from the hinge.
- 7. Place one (1) of the reinforcing blocks flat against the inside of the mounting flange as shown below in the diagram. Be sure that the radius or curved side of the reinforcing block is mounted toward the chamber.
- 8. Using two (2) of the bolts provided in the kit, secure the reinforcing block to the mounting flange, door hinge and front panel.
- 9. Replace the outer casing of autoclave.

