



replacement parts industries, inc.

"The Alternate Source"™

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rplparts.com • WEBSITE: www.rplparts.com

**PCS804
INTENSITY SWITCH
INSTALLATION INSTRUCTIONS**

CAUTION

**Turn off and disconnect the power supply for the light
before installing this Kit.**

1. Turn off and disconnect the power supply for the light.
2. Using a Phillips Head screwdriver remove, the (4) screws that hold the yoke cap to the yoke body. Save the screws for later use in these instructions.
3. Remove the mounting hardware on the original Intensity Switch and push the Intensity Switch through the yoke body, leaving the Intensity Switch still connected.
4. One at a time, remove wire nut, disconnect and reconnect to new Intensity Switch (ensure connections are to the same switch terminal). Repeat for each wire.
5. Push the newly wired Intensity Switch back through the opening in the yoke body and using the provided mounting hardware, secure the new Intensity Switch to the yoke body.
6. Press the wires and wire nuts down into the cavities on the yoke body. Use caution and be sure not to crimp or pinch the wires when replacing the yoke cap using the Phillips head screws removed in Step #1.
7. Restore power and check light operation.