



replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

PCT081 TIMER INSTALLATION INSTRUCTIONS & WIRING DIAGRAM

Please note the following when installing the PCT081 Timer:

