



replacement parts industries, inc.

"The Alternate Source"

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028

E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

SDV046

TRANSITION VALVE

INSTALLATION INSTRUCTIONS

1. Remove the protective yellow cap. Nested inside the yellow cap are a spring and piston; remove both the spring and piston. Then discard the yellow cap.
2. Place the spring onto the piston as shown below in the illustration, and then insert back into the valve before installing the valve.

