



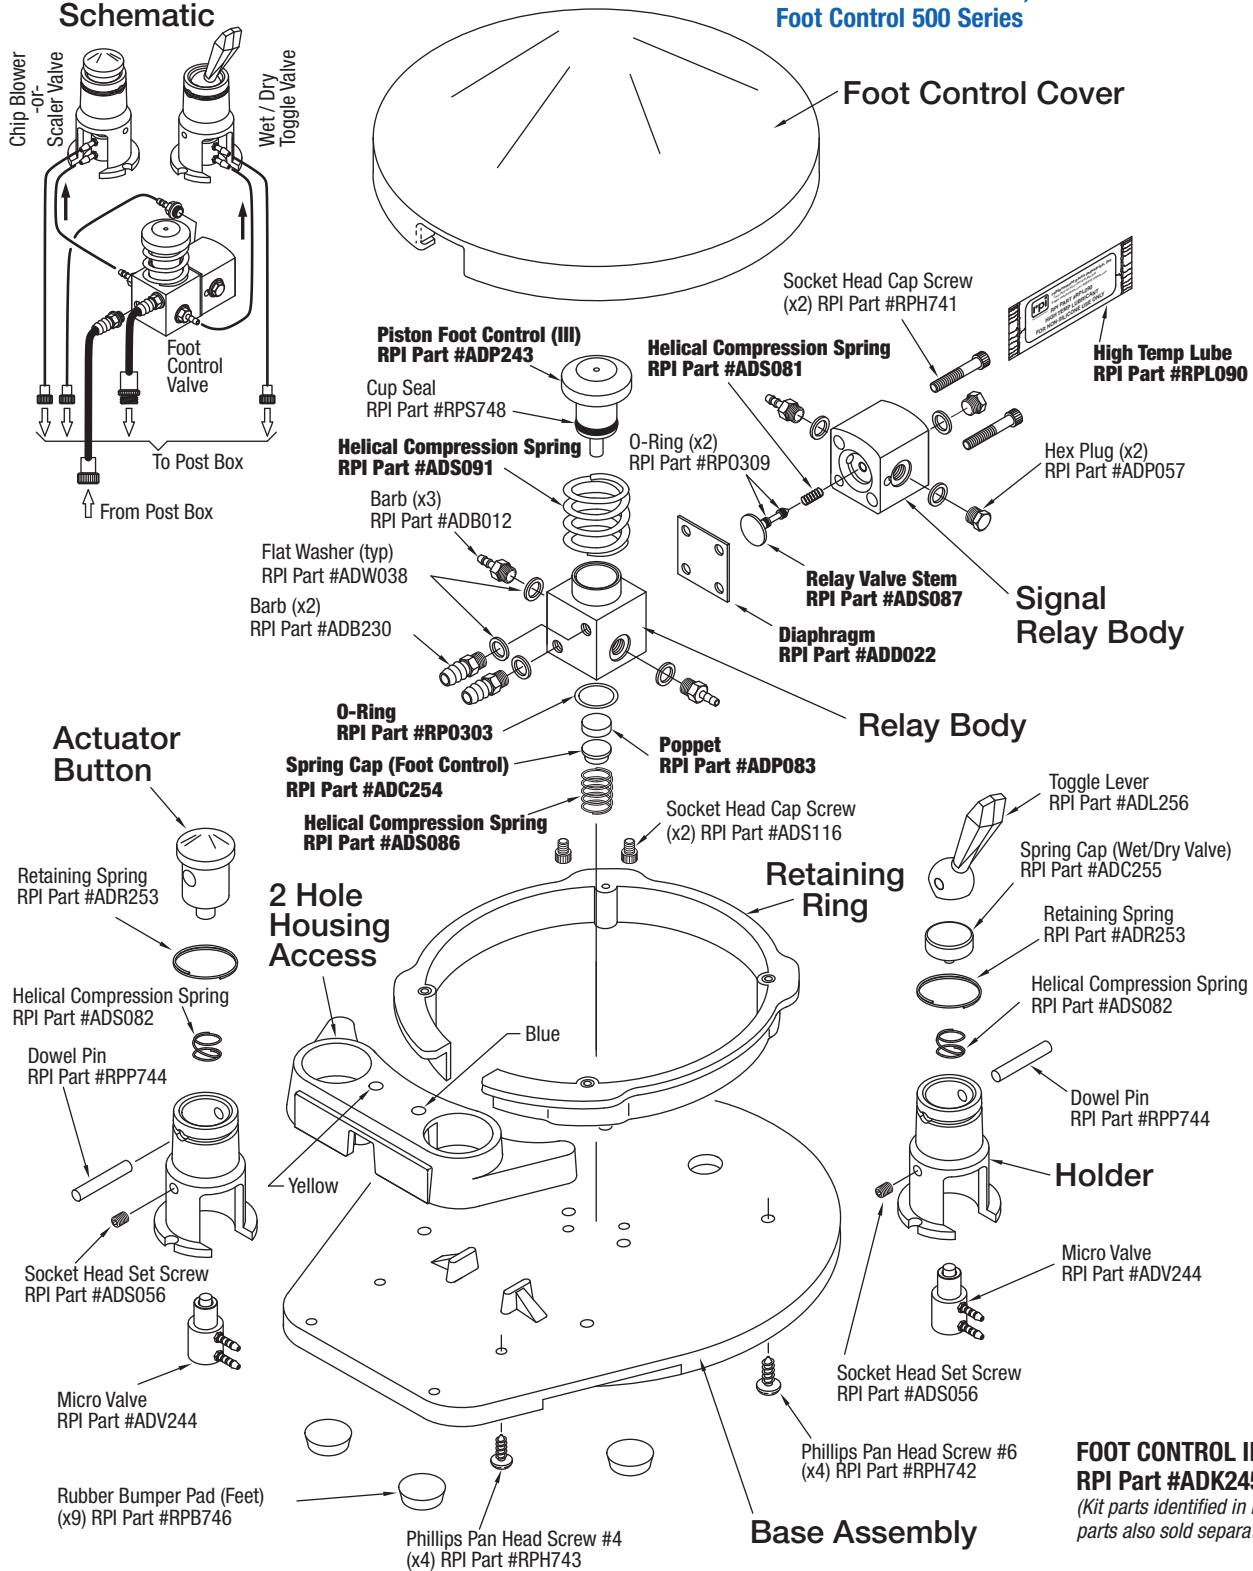

Parts to Fit A-dec Foot Control Assembly

Models: Foot Control III (OEM Part #'s 38.1601.00, 38.1603.00 & 38.1700.00),
Foot Control Lever Action (OEM Part # 38-0200-00),
Foot Control 300 Series, &
Foot Control 500 Series

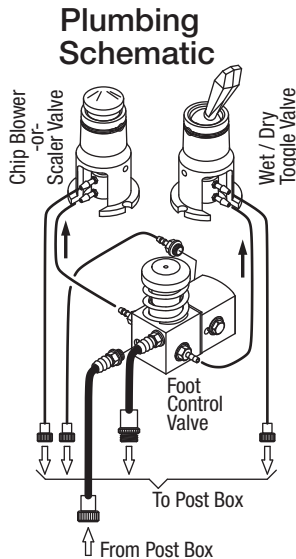

FOOT CONTROL III SVC KIT
RPI Part #ADK245
(Kit parts identified in bold text - All
parts also sold separately)