




New & Improved Parts

to fit **Tuttnauer**® Manual and Automatic Steam Sterilizers!

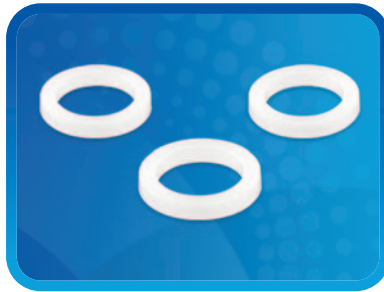

RPI Part #TUG045
OEM Part #GAS082-0008

STRAINER GASKET


- 3 per package
- Material: Natural Silicone
- Size: 1.110" OD x .158" CS x .158" thk.
- Also available: Filter Screen (New Style) (RPI Part #TUF103)

Fits: Rear Strainer

Models: 1730E/EK/M/MK/MKV, 2340E/EA/EK/EKA/M/MK,
2540E/EA/EHS/EK/EKA/M/MK, 3850E/EA/EHS/M,
3870E/EA/EHS/M, EZ9, EZ9K, EZ10 & EZ10K



IMPROVED

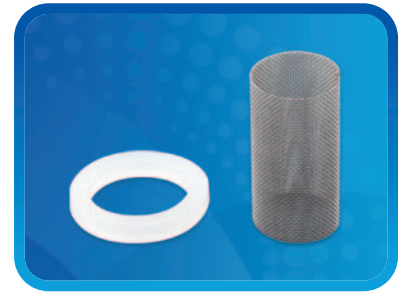

RPI Part #TUF103
OEM Part #FIL175-0006

FILTER SCREEN (New Style)

- .70 dia x 1.26" lg.
- Material: Stainless steel
- Fits all electronic machines built from 2000 to present
- Now Includes: Strainer Gasket (RPI Part #TUG045)

Fits: Filter Cap Assembly

Models: 1730E/EK, 2340E/EA/EK/EKA, 2540E/EA/EK/EKA,
3850E/EA, 3870E/EA, EZ9, EZ9K, EZ10 & EZ10K



RPI Part #TUT046
OEM Part # (No OEM Part # Available)

HOUSING BOLT & BELLOWS REMOVAL TOOL

- A small RPI exclusive tool designed to both remove the bellows housing bolt and also to remove the rubber door bellows.

- Material: Stainless Steel
- Size: 3-1/2" lg. x 1/2" Hex
- Also available: Door Bellows Housing Bolt (RPI Part #TUB064), Door Bellows (RPI Part #TUB019), and Door Bellows Assembly Kit (RPI Part #TUK030)

Fits: Door

Models: 1730E/EK/M/MK/MKV, 2340E/EA/EK/EKA/M/MK,
2540E/EA/EHS/EK/EKA/M/MK, 3850E/EA/EHS/M,
3870E/EA/EHS/M, EZ9, EZ9K, EZ10 & EZ10K



RPI Part #TUT073
OEM Part #TEST-3

TAP

- Use to re-tap bellows housing in door
- 3/8-19 BSPP Threads
- Use a standard 9/16" open end wrench or a 5/8" socket as a hand tap wrench
- Includes durable plastic storage case
- Also available: Housing Bolt & Bellows Removal Tool (RPI Part #TUT046), Door Bellows Housing Bolt (RPI Part #TUB064), and Door Bellows Assembly Kit (RPI Part #TUK030)


Fits: Door

Models: 1730E/EK/M/MK/MKV, 2340E/EA/EK/EKA/M/MK,
2540E/EA/EHS/EK/EKA/M/MK, 3850E/EA/EHS/M,
3870E/EA/EHS/M, EZ9, EZ9K, EZ10 & EZ10K



Also Available...

DOOR BELLOWS HOUSING ASSEMBLY

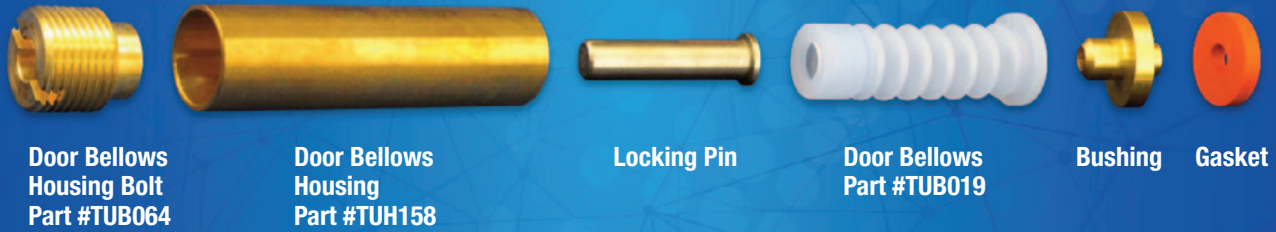

RPI Part #TUK030
OEM Part #CT241111

DOOR BELLOWS ASSEMBLY KIT

- Includes all parts as shown
- Includes: Door Bellows (RPI Part #TUB019)
- Also available: Housing Bolt & Bellows Removal Tool (RPI Part #TUT046), Tap (RPI Part #TUT073), and Door Bellows Housing (RPI Part #TUH158)

Fits: Door

Models: 1730E/EK/M/MK/MKV, 2340E/EA/EK/EKA/M/MK, 2540E/EA/EHS/EK/EKA/M/MK, 3850E/EA/EHS/M, 3870E/EA/EHS/M, EZ9, EZ9K, EZ10 & EZ10K



RPI Part #TUB064
OEM Part #CT245010

DOOR BELLOWS HOUSING BOLT

- 3/8-19 BSPP
- Material: Brass
- Also available: Housing Bolt & Bellows Removal Tool (RPI Part #TUT046), Tap (RPI Part #TUT073), and Door Bellows Assembly Kit (RPI Part #TUK030)

Fits: Door

Models: 1730E/EK/M/MK/MKV, 2340E/EA/EK/EKA/M/MK, 2540E/EA/EHS/EK/EKA/M/MK, 3850E/EA/EHS/M, 3870E/EA/EHS/M, EZ9, EZ9K, EZ10 & EZ10K



RPI Part #TUB019
OEM Part #


(No OEM Part # Available)

DOOR BELLOWS

- Blue Silicone
- Also available: Housing Bolt & Bellows Removal Tool (RPI Part #TUT046)
- Included in: Door Bellows Assembly Kit (RPI Part #TUK030)

Fits: Door

Models: 1730E/EK/M/MK/MKV, 2340E/EA/EK/EKA/M/MK, 2540E/EA/EHS/EK/EKA/M/MK, 3850E/EA/EHS/M, 3870E/EA/EHS/M, EZ9, EZ9K, EZ10 & EZ10K

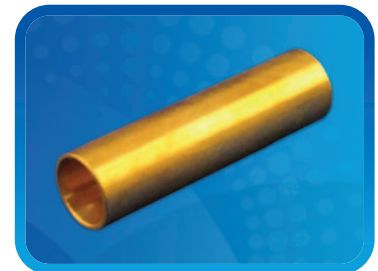

RPI Part #TUH158
OEM Part #CT245010

DOOR BELLOWS HOUSING

- Material: Brass
- Size: .57" O.D. x 2.12" lg.
- Also available: Door Bellows Assembly Kit (RPI Part #TUK030)

Fits: Door


Models: 1730E/EK/M/MK/MKV, 2340E/EA/EK/EKA/M/MK, 2540E/EA/EHS/EK/EKA/M/MK, 3850E/EA/EHS/M, 3870E/EA/EHS/M, EZ9, EZ9K, EZ10 & EZ10K

Pro Tips for Door Gasket Installation:

Tip #1 - Lubricate the gasket with soapy water before inserting it into gasket channel.

Tip #2 - For easy installation of the new gasket, use the "North-South-East-West" method (i.e., begin installing the gasket at the top of the door, then install the bottom, then the left side, then the right side, and then everything in between making sure that the gasket fits flush without bumps or gaps).

Tip #3 - In case you missed it - The Door Gaskets (RPI Part #'s TUG001, TUG003, and TUG021) have a slight taper. The wider side is inserted into the door first.

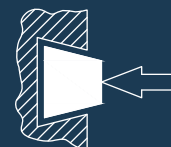

The wider side of the gasket goes in first.