
replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028 E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

CAT066 TIMER WIRING INSTRUCTIONS

IMPORTANT: OPERATING INSTRUCTIONS WITH ADHESIVE BACKING ENCLOSED FOR USER AID.

SERIAL #144999 & BELOW

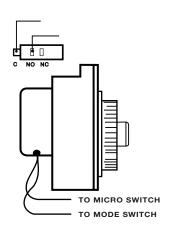


A. ORIGINAL TIMER

COMMON: Black P.C. Board Wire and Black Line

Cord Wire to R1 on Switch.

NORMAL OPEN: Black Timer Wire to F2 on Switch.

NORMAL CLOSE: OPEN POSITION

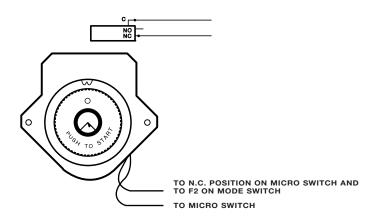

B. REPLACEMENT TIMER


COMMON: Black P.C. Board Wire and Black Line Cord

Wire to R1 on Switch.

NORMAL OPEN: OPEN POSITION


NORMAL CLOSE: Blue Timer Wire to F2 on Switch.

SERIAL #145000 & ABOVE

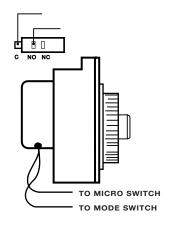

A. ORIGINAL TIMER

Remove and note wiring.

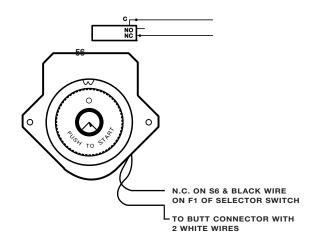

B. REPLACEMENT TIMER

COMMON: Red & Gray wires

Red from S5, Gray from Transformer.

NORMAL OPEN: Not used.

NORMAL CLOSE: Lead from Timer Motor.

Rev- (12/00)