




"The Alternate Source"™

replacement parts industries, inc.

CALL 800-221-9723 or 818-882-8611 • FAX 818-882-7028
E-MAIL: techsupport@rpiparts.com • WEBSITE: www.rpiparts.com

CAT074 TIMER WIRING INSTRUCTIONS

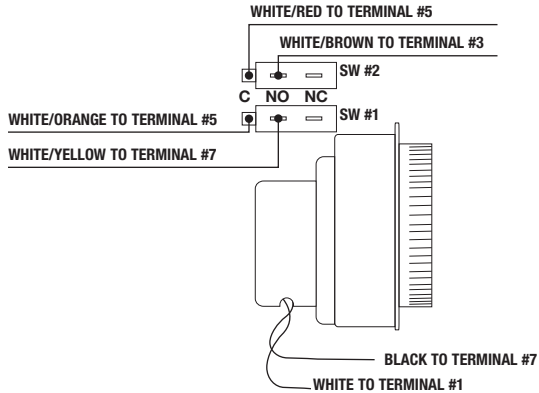

A. OEM TIMER (SIDE VIEW)

SW #2

COMMON: White/Red Stripe to Terminal #5

NORMAL OPEN: White/Brown Stripe to Terminal #3


NORMAL CLOSE: OPEN POSITION

SW #1

COMMON: White/Orange Stripe to Terminal #5

NORMAL OPEN: White/Yellow Stripe to Terminal #7

NORMAL CLOSE: OPEN POSITION

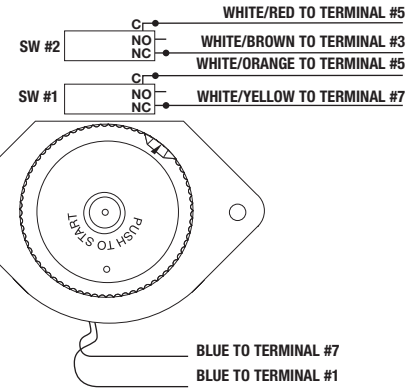

B. REPLACEMENT TIMER (FRONT VIEW)

SW #2

COMMON: White/Red Stripe to Terminal #5

NORMAL OPEN: OPEN POSITION

NORMAL CLOSE: White/Brown Stripe to Terminal #3

SW #1

COMMON: White/Orange Stripe to Terminal #5

NORMAL OPEN: OPEN POSITION

NORMAL CLOSE: White/Yellow Stripe to Terminal #7

NOTE: Blue motor wires
are interchangeable

IMPORTANT: OPERATING INSTRUCTIONS WITH ADHESIVE BACKING ENCLOSED FOR USER AID.